


HOGTUNES

Audio Solutions For The Great American Cruiser

Wiring Diagram For Adding Tweeters To Existing System

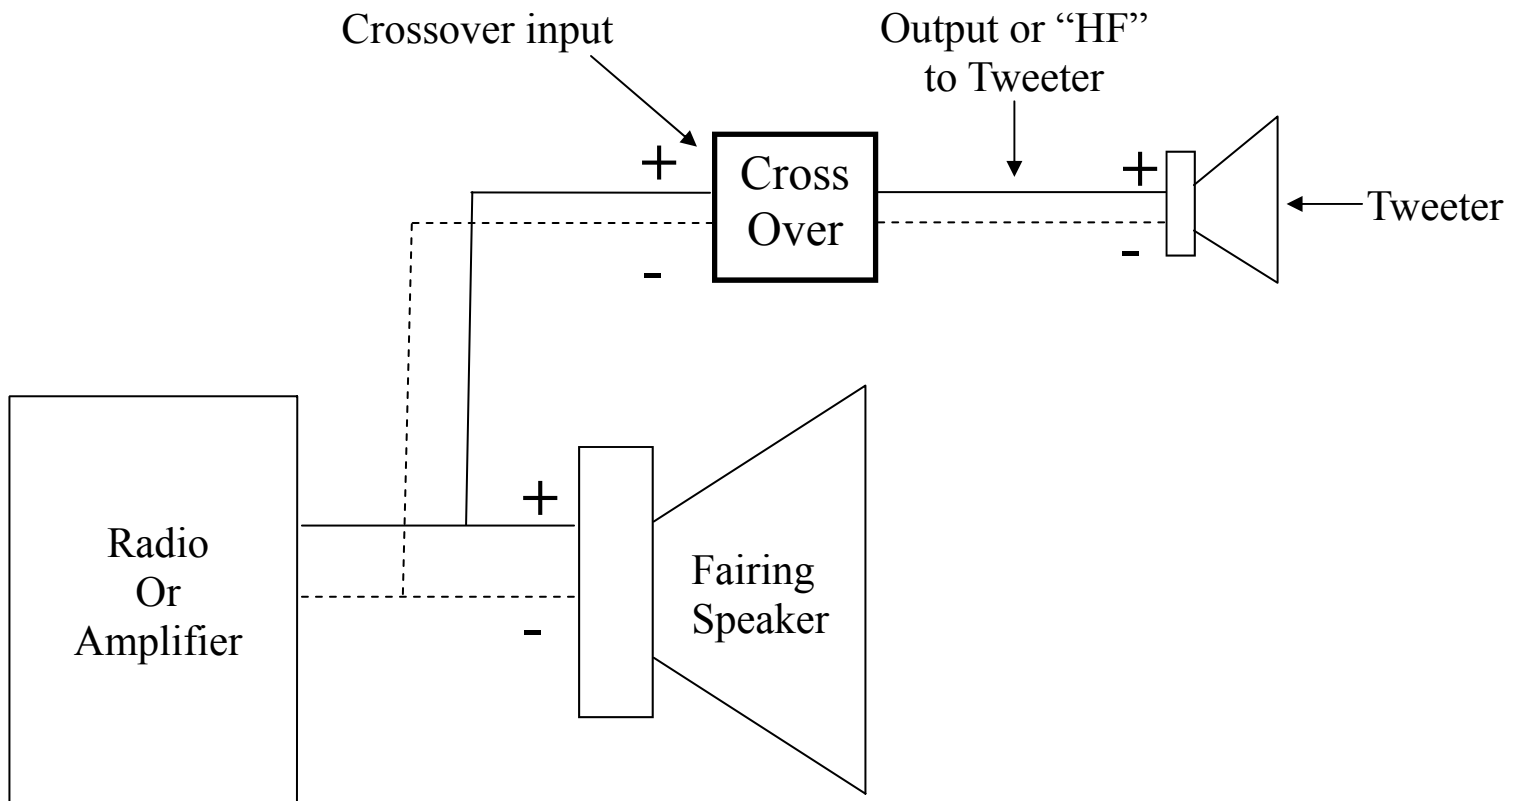

We suggest the use of **4 ohm tweeters ONLY**.

Do not add tweeters to 98-05 stock radios without a front speaker amplifier present!!!

Adding 4 ohm tweeters to the HK Advanced Audio Radio is OK with or without a front channel external amplifier present.

If the supplied crossover for the tweeters has a woofer or "LF" output, these connectors are NOT to be used.

This document is provided as a service to Houghtunes customers, and the motorcycle audio community in general. If you are not sure about wiring, or what you're doing, ASK FIRST or see your dealer. By using this document, you agree that Houghtunes has zero responsibility for damage to in any way to any equipment!